



PRODUCT MANUAL



CONTENT

NOTES	1
SPECIFICATIONS	2
OVERVIEW	3
SCHEMATIC CONNECTED TO HVAC	5
WALL MOUNT INSTALLATION	6
DIRECTION	7
TIME SETTING	9
CONCENTRATION AND CONSUMPTION	12
EQUIPMENT CLEANING	14
WARNING	15
TROUBLE SHOOTING	16



NOTES

Please comply with the following for safety reasons.



Do not modify or disassemble the scent machine without first consulting us.
In case of product failure please contact us.



Do not use the power chord if it is damaged, kinked or cut. It's a fire hazard.

 



To avoid electrical shock, do not touch the power adaptor or the machine while plugged into the electrical socket during a thunderstorm or lightning.




Do not dismantle or try to repair the machine while its plugged into the electrical outlet or in operation.

OVERVIEW (SE2500)

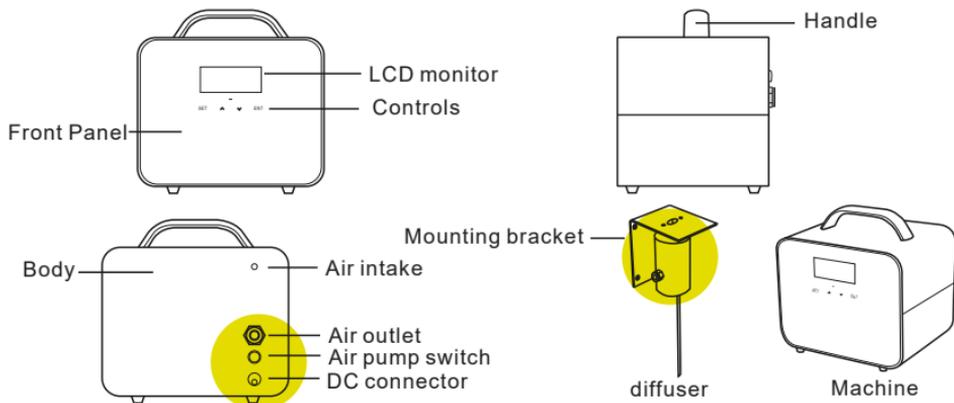

Bottle

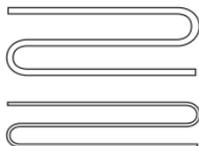

PU tube

1 HVAC Tube
1 Air Tube



Mounting bracket and diffuser head,
HVAC adaptor, silencer



PTFE tape, screws


 






power adaptor




Manual


OVERVIEW (SE5000)

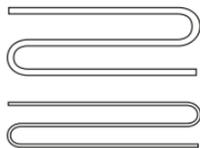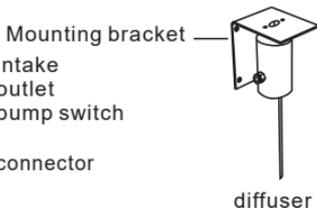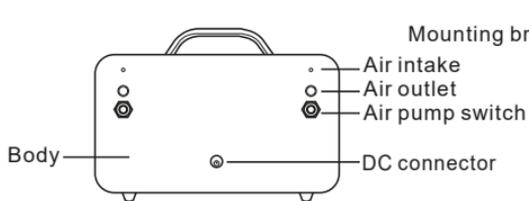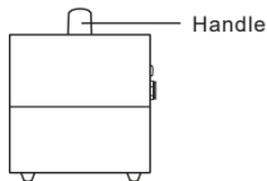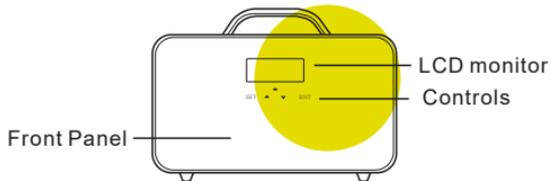

2 HVAC Tube
2 Air Tubes

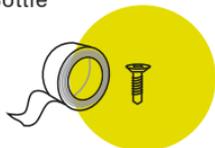

SCHEMATIC FOR CONNECTED TO HVAC

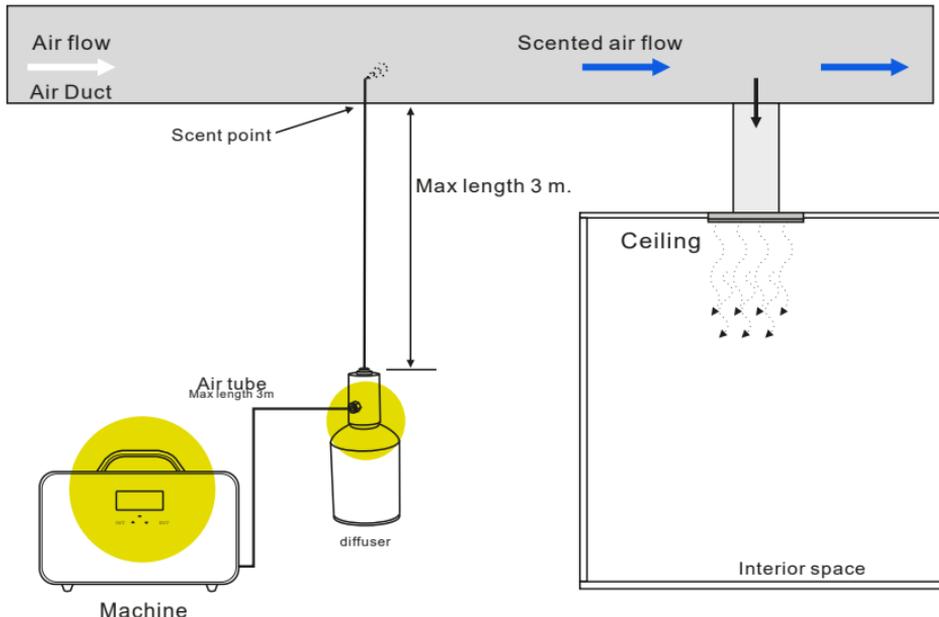


HVAC space diffusion – diffuser is connected to air duct
Max length 3m

Note


- No pockets in this tube.
(see picture a)
- Keep length of this tube
as short as possible

SCHEMATIC CONNECTED TO HVAC

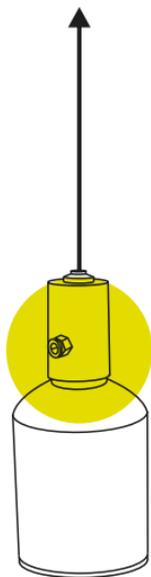


good

Picture a.
Scent tube

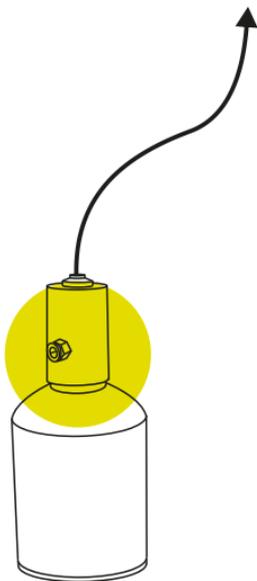

good

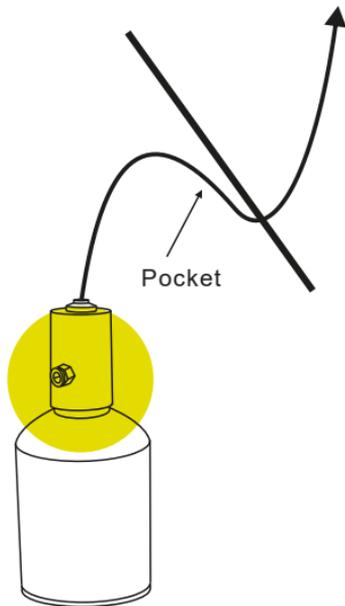


Wrong. Tube has
a pocket, this part
will fill up with oil

DIRECTION

Application places: Hotel, Meeting Room, Mall, Exhibition Hall, Brand retail store, Bar, SPA, Business Place or somewhere you want fragrance experience.

Stand on floor

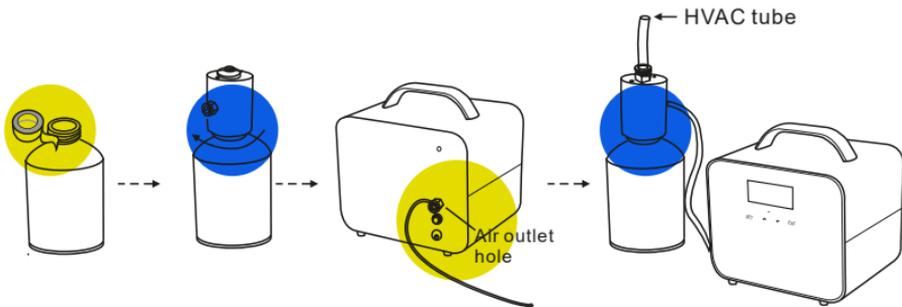


1. Wrap the neck of bottle with PTFE tape to seal it and screw the bottle to the atomizing head;
2. Connect the air tube to machine air outlet;
3. Connected the other end of the air tube to the atomizing head air inlet;
4. Connect with power supply, turn on the air pump switch;

(Note: if need to use HVAC tube, need to take off the small silencer and install the HVAC connector.)

DIRECTION


Wall mounting:

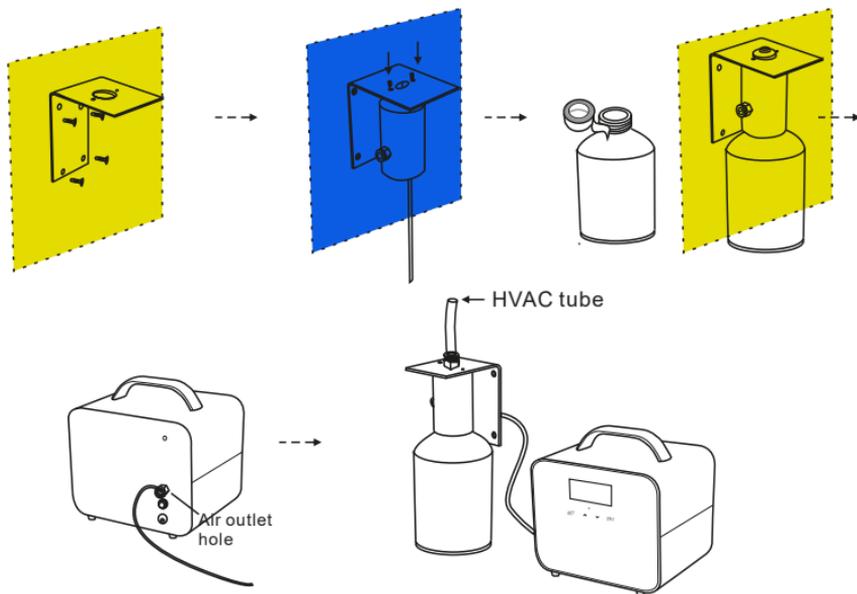

1. Use the screws to fasten the mounting bracket to the wall.
2. Use the screws fasten the atomizing head to the mounting bracket.
3. Wrap the neck of bottle with PTFE tape to seal it and screw the bottle to the atomizing head.
4. Connect the air tube to machine air outlet hole".
5. Connected the other end of the air tube to the atomizing head air inlet.
6. Connect with power supply, turn on the air pump switch.

(Note: if need to use HVAC tube, need to take off the small silencer and install the HVAC connector)

TIME SETTING

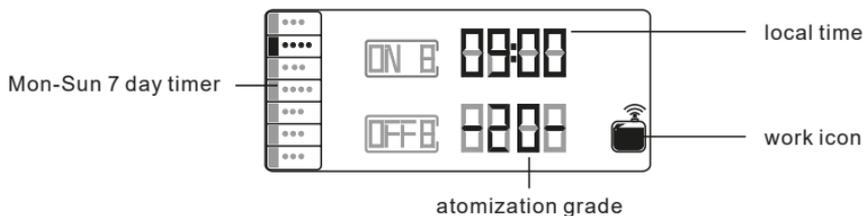

Power ON

Connect the 12V adaptor to the outlet and turn ON the power switch. Local time and scent intensity grade will come on.

Power OFF


Turn off the power switch, no display panel.

Screen Lock and Unlock

The LCD screen will automatically lock itself after 10 seconds if not used. Press SET and hold for 5 seconds to unlock the display.

Local time setting

Press **SET** button for 3 seconds until you hear a beep to enter local time setting menu. Press **▼** or **▲** button to choose the correct day. Then press **ENT** button to move to local time setting. Press **▼** or **▲** button to change the number. Press **ENT** button to move to another position. Press **SET** to confirm (Figure 1).

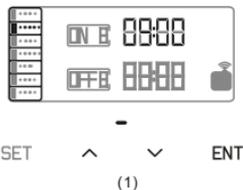

TIME SETTING

Diffusion time setting

There are 5 working periods available to be set for the machine(Figure2). Press button **SET** go to set the first working period (ON1 & OFF1). Press **▲** or **▼** button to adjust the number. Press button **ENT** move to next setting position. Once the first working period (ON1&OFF1) is set, we can choose it works on which day of a week. Press **ENT** move to MON position then press **▲** to turn on the working period (Under ON1) (Figure3) or press **▼** to turn off the working period (Under OFF1)(Figure4); press **ENT** move to next day and setting way is same as MON. Press button **SET** and follow above steps set period 2, 3, 4, 5 and after period 5 touch **SET** again to confirm and exist the setting.



SET ▲ ▼ ENT
(2)



SET ▲ ▼ ENT
(3)



SET ▲ ▼ ENT
(4)

TIME SETTING

Available working period	07:00 - 21:00	00:00 - 00:00	00:00 - 00:00	00:00 - 00:00	00:00 - 00:00
Mon	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Thues	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Wed	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Thur	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Fri	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Sat	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
Sun	ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF

(The first working period is set to factory default setting, 7 am ON and 21:00 OFF. The rest are at set to 00:00)

Intensity Setting

The scent machine has a total of 20 grades. Press ▲ button to increase the intensity and ▼ button to decrease. (Figure 5)



SET ^ v ENT

(5)

CONCENTRATION AND CONSUMPTION

Form 1 Atomization Concentration

Grade	Working(sec)	Stop(sec)
G20	300s	15s
G19	150s	15s
G18	120s	20s
G17	85s	20s
G16	80s	25s
G15	75s	30s
G14	60s	30s
G13	50s	30s
G12	40s	30s
G11	33s	30s
G10	30s	33s
G9	30s	40s
G8	30s	50s
G7	30s	60s
G6	30s	75s
G5	25s	80s
G4	20s	85s
G3	20s	120s
G2	15s	150s
G1	15s	300s



CONCENTRATION AND CONSUMPTION

Aroma oil consumption

SE2500										
Consumption(ml/hr)	G1	G2	G3	G4	G5	G6	G7	G8	G9	G10
	0.2	0.4	0.6	0.8	1.0	1.2	1.4	1.6	1.8	2.0
	G11	G12	G13	G14	G15	G16	G17	G18	G19	G20
	2.2	2.4	2.6	2.8	3.0	3.2	3.4	3.6	3.8	4.0

SE5000										
Consumption (ml/hr)	G1	G2	G3	G4	G5	G6	G7	G8	G9	G10
	0.4	0.8	1.2	1.6	2.0	2.4	2.8	3.2	3.6	4.0
	G11	G12	G13	G14	G15	G16	G17	G18	G19	G20
	4.4	4.8	5.2	5.6	6.0	6.4	6.8	7.2	7.6	8.0

Note: 1. The above data is based on using aroma oil.

2. Using other type of oil may have an effect on the consumption rate.

EQUIPMENT CLEANING

The machine needs to be cleaned when below situations happen:

1. You're about to change to another kind of essential oil.
2. The atomization volume becomes weak .

Cleaning steps:

1. Find a clean bottle and fill it with industrial alcohol.
2. Install bottle with industrial alcohol to the machine and turn on the electric. Let it work for 5-10 minutes.
3. Turn off the electric, finish the cleaning.

Tips:

You can use the machine directly after cleaning. There is no need to wash the tube again or wait until dry.

WARNING

- Atomization icon displays on screen but the machine would not diffuse when it stays on pause time.
- It is invalid to touch/tap button when machine is under lock status.
- If the screen displays messy、programs crash, please reset the machine by touch “ENT” button about 5 seconds till a short “beep” noise comes out.The factory default:local time Sunday,12:00;diffusion 07:00~21:00.
- After installation,please keep the machine vertical.Tilt or lie flatly may cause oil overflow. The machine efficiency may be affected if the circuit board is contaminated.

TROUBLE SHOOTING

Before asking to have the machine repaired please try to diagnose the problem first following to below instructions.

Problem	Solution
No diffusion	<ul style="list-style-type: none">- Check if the power is ON or OFF.- The pump is damaged and needs replacing.- Air tube is loose and needs to be reconnected.- If the machine is in "not working period" it stops diffuse.
Little or no spray coming out	<ul style="list-style-type: none">- Atomization head is blocked. Clean with alcohol.- Diffuser core with straw is missing or damaged. Replace with a new one.- Pump is damaged and may need replacing.- Check the air tube, if loose reconnect it.- Gasket inside the atomizers head missing or damaged change a new one.
Diffuser spraying liquid	<ul style="list-style-type: none">- Diffuser core is damaged. Replace diffuser core.- Machine is tilted or angled. Make sure it's upright at all times.
Oil Spillage	<ul style="list-style-type: none">- Bottle is loose. Screw it in properly and straight.- No gasket or gasket damaged in the atomizing head.
Abnormal sound	<ul style="list-style-type: none">- Pump is loose or damaged. Tighten the pump or replace.
No display on screen	<ul style="list-style-type: none">- Make sure the power is ON.- Check the plug for damage. Try another outlet. If plug is damaged replace.- Display screen is damaged. Replace.



www.smellandsmile.de

